

# MAGIC VAPOR

## Automatic water reload

 


Bieffe Srl Via Levato 1/1-1/3 61100 Pesaro  
Tel. 0039 0721281857 Fax 0039 0721281880  
www.bieffeitalia.it info@bieffeitalia.it

We have been creating and manufacturing steam generators and ironing boards for more than 20 years.

We apply our knowledge and experience to several fields: sewing, household, catering, cosmetics, etc...

Mr. Farinelli thanks you

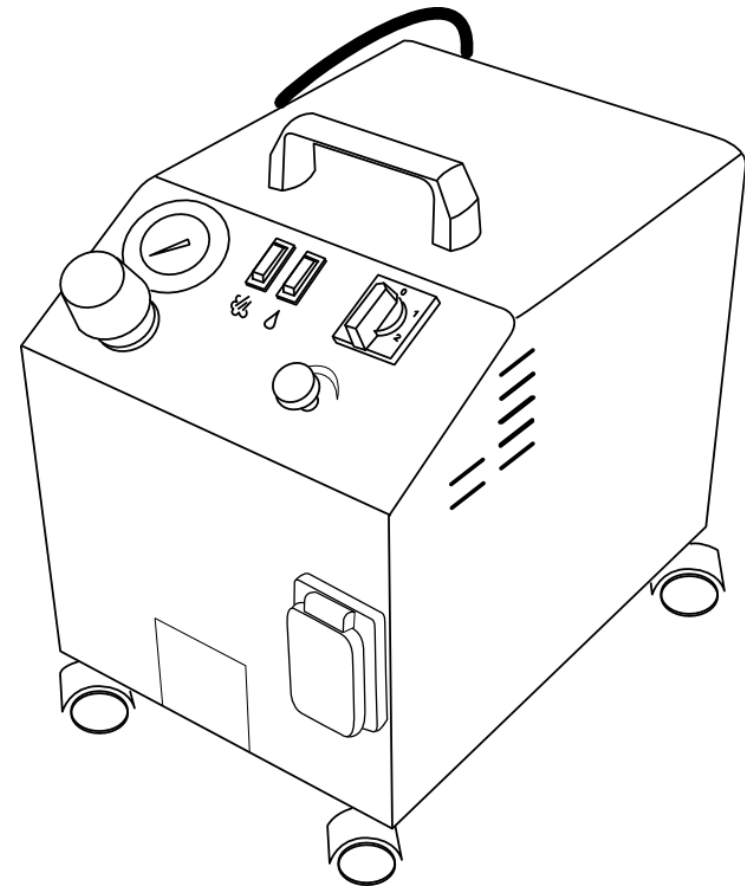

*Information, descriptions and illustrations contained in this manual are not binding.  
BIEFFE maintains the right to introduce any necessary change. March 2011*

**MADE IN ITALY.** *The whole BIEFFE production is made in Pesaro.  
Components produced in Italy and recyclable materials are used.*

## GENERAL SAFETY INSTRUCTIONS

 
- ⇒ After the removal of the package make sure of the appliance's integrity. In case of doubt do not operate the appliance but take it to a qualified service person for examination and repair. Plastic bags, polystyrene, etc..., must be kept out of the children's reach.
- ⇒ Before connecting appliance, make sure that data on the plate are the same as the power supply network.
- ⇒ Plug appliance into grounded outlet of sufficient power as provided for by the safety regulations in force.
- ⇒ Do not touch appliance with wet or damp hands.
- ⇒ Always disconnect appliance from electrical outlet when not in use.
- ⇒ This appliance is only and exclusively for its intended use so the manufacturer can not be held responsible for any probable damage due to an illegitimate use.
- ⇒ Never unscrew the safety valve cap during use.
- ⇒ Before cleaning and maintenance make sure that appliance is disconnected from outlet. Do not wash the appliance, do not immerse in water. Before filling the boiler, make sure that appliance is unplugged.
- ⇒ In case of failure or operational defect, turn off appliance, disconnect from electrical outlet. Do not disassemble or attempt to repair the appliance. Incorrect re-assembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Any repair must be executed by qualified service persons authorized by the manufacturer. Ask for exclusive use of original spare-parts.
- ⇒ Installation must be executed according to manufacturer's instructions (space for ventilation, room temperature).
- ⇒ Do not operate appliance with damaged cord or hose, but let it made replaced.
- ⇒ Do not remove safety device and protective cover.
- ⇒ Before servicing make sure that appliance is unplugged from electrical outlet.
- ⇒ The non-observance of the above OPERATING AND SAFETY INSTRUCTIONS could prejudice safety.

Have a good job

The product complies with the requirements of EC Directive:

97/23/CE, 2004/108/CE, 2006/42/CE


## ACCESSORI VAPORE IN DOTAZIONE

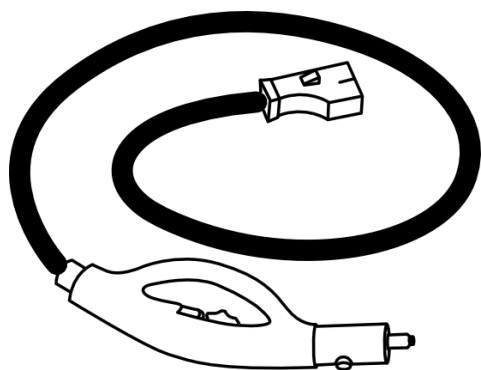


Cod. MGK01  
Steam hose Konfort flex 2mt



 
Cod. MGL  
PVC Steam brush d.20 for MGK04  
(upon request, available: STEEL, BRONZE AND BRISTLE)

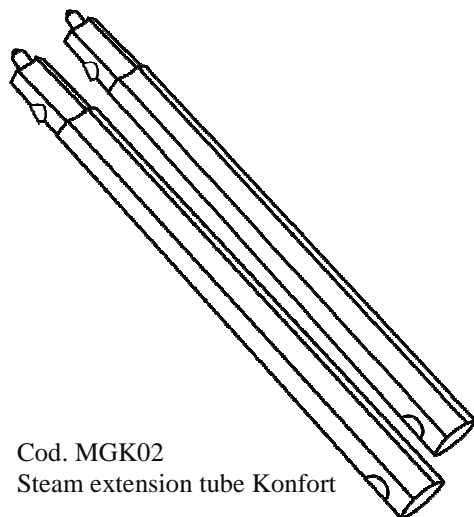

 
Cod. MGK02  
Steam extension tube Konfort

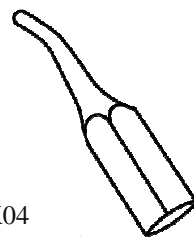


Cod. MGK04  
Steam Lance Konfort

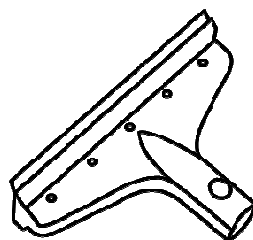 

 
Cod. MGK05  
Steam window cleaner Konfort

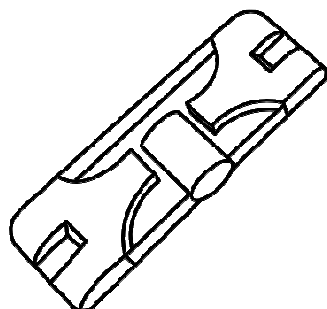

 Cod. MGK07  
Steam rectangular brush Konfort

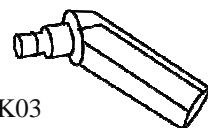

Cod. MGK03  
brush-connector Konfort

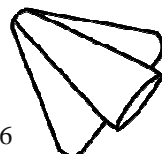 

Cod. MGK06  
Steam triangular brush Konfort


## CONTENTS AND LABELS

 N. Pz. 1

Steam generator

N. Pz. 9

Standard accessories (see page 6)

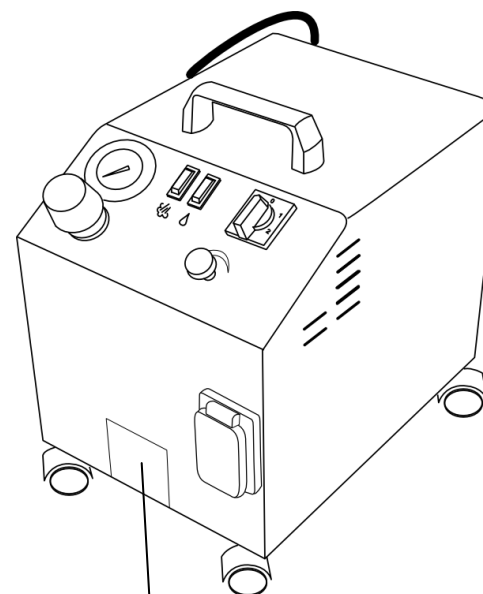

**Bieffe**

Mod. MAGIC VAPOR RA Cod.BF009	
Alimentazione Power	230 V ~ 60 Hz
Capacità caldaia Boiler	2,8 LT
Potenza caldaia Boiler Power	900 + 900 W
Temperatura vapore Steam pressure	165°
Pressione vapore Steam pressure	4,8 BAR

 
N.

 
### CAUTION

**DO NOT REMOVE SAFETY DEVICE AND PROTECTIVE COVER BEFORE MAINTENANCE AND SERVICE MAKE SURE THAT APPLIANCE IS UNPLUGGED FROM ELECTRIC OUTLET AND BOILER IS COOL AND NOT UNDER PRESSURE**

### CONSUMER NOTICE:





The BIEFFE product you have purchased is subject to Directive 2002/96/EC of the European Parliament and the Council of the European Union on waste electrical and electronic equipment (WEEE) and, in jurisdictions adopting that Directive, is marked as being put on the market after August 13, 2005, and should not be disposed of as unsorted municipal waste. Please utilize your local WEEE collection facilities in the disposition of this product and otherwise observe all applicable requirements.

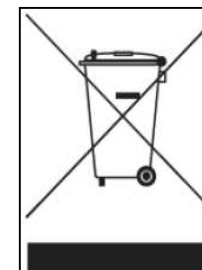

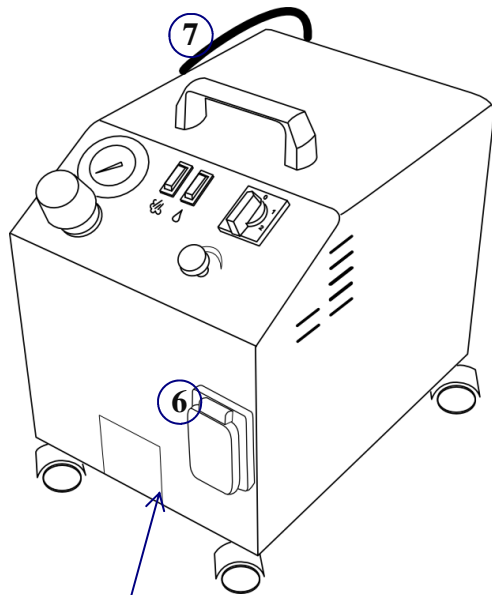

## LEGENDA

    - 1 Safety cap
- 2 Draining tap
- 3 Water tank
- 4 Water recharge hose
- 5 Steam inlet
- 6 Steam outlet
- 7 Power cable
- 8 General switch
- 9 Steam ready lamp
- 10 Pressure gauge
- 11 Steam flow knob
- 12 Steam switch
- 13 End of water indicator lamp

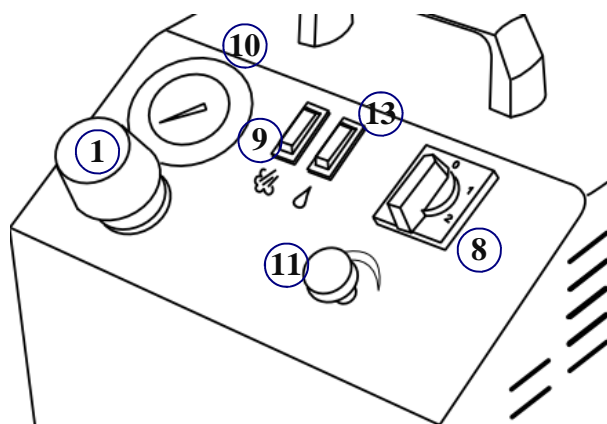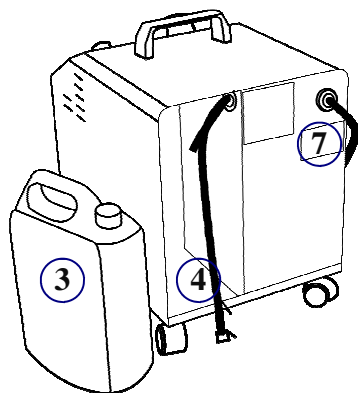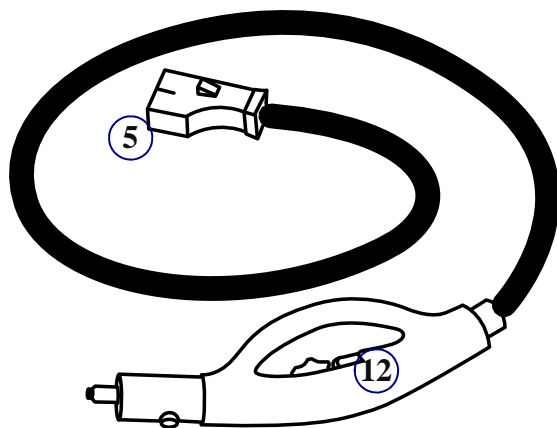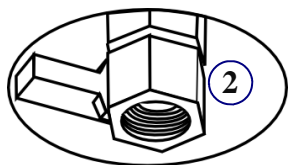

## SETTING UP

- ⇒ Screw the safety cap 1, do not overtighten. Be sure that the draining tap 2 is closed.
- ⇒ Fill in the water tank 3 (Note: do not use distilled water). The recharge hose 4 must be inside the tank completely in the water.
- ⇒ Connect the steam inlet 5 of the steam gun to the steam outlet 6.
- ⇒ According to the surface, insert a tool into the steam gun.
- ⇒ Plug into ground outlet.
- ⇒ Turn the general switch 8 on position 1 to activate the machine and the first heater. Turn the general switch 8 on position 2 to get the high temperature faster and a stronger and longer steam jet.
- ⇒ Before working, wait until the steam ready lamp 9 lights up and/or the pressure gauge 10 reaches 3atm.

## OPERATING INSTRUCTIONS

- ⇒ Turn the knob 11 to control the steam flow.
- ⇒ Press the button 12 under the steam gun to get the steam jet.
- ⇒ When the boiler is going to be empty, the pump recharges the boiler with water from the tank 3. When the tank is empty, a sound alarm is activated. During the alarm the machine stops working. To work again fill in the tank.
- ⇒ At the end turn the general switch on position 0 and unplug the machine.

## MAINTENANCE: EMPTYING/CLEANING THE BOILER

- ⇒ Unplug the machine and unscrew the safety valve cap counterclockwise half a turn to release all pressure in the boiler.
- ⇒ When the boiler is cold and not under pressure, open the draining tap under the machine and pour out the water from the boiler.
- ⇒ It is not necessary to pour out all remaining water each time you finish cleaning. Do the emptying/cleaning operations once a month (or more according to the use).

**WHEN FINISHED WORKING, TURN OFF ALL THE SWITCHES, UNPLUG THE APPLIANCE AND KEEP IN A DRY PLACE.**